

## SEPTAGE RECEIVING STATION (SRS) INSTRUCTIONS

1. ENTER 3 DIGIT "USER ID NUMBER" PRESS "ENTER"
2. ENTER 4 DIGIT "USER PIN NUMBER" PRESS "ENTER"
3. IS HOSE CONNECTED???? PRESS "START"
4. WHEN LOAD IS DONE PRESS"STOP"
5. SYSTEM WILL AUTOMATICALLY STOP IF NO FLOW IS DETECTED FOR 2 MINUTES. IF MORE TIME IS REQUIRED PRESS "HOLD" TO CLOSE THE VALVE WITHOUT CLOSING THE TRANSACTION. PRESS "START" TO CONTINUE TRANSACTION
6. YOUR LOAD MAY BE SAMPLED
7. AFTER INLET VALVE CLOSSES, SYSTEM WILL INITIATE FLUSHING CYCLE

## IMPORTANT NOTES

In addition to the numeric key pad, 3 buttons labeled F1, F2, F3 are located below the screen. **"ENTER" or "MORE TIME" will be displayed above the corresponding button.** If you require more time to connect your hose, press "MORE TIME".

The SRS is equipped with an internal heater to maintain the equipment at a reasonable temperature. Please remember to close the small display door when you are finished using the SRS.

This SRS is equipped with a flow meter that must be submerged at all times. Although the SRS is designed to accommodate this, **please allow your tanks to drain by gravity so air is not passed through the meter. Air passing through the meter could cause the meter to report higher volumes.**

## SRS RATES

- SINGLE AXEL – \$45.00
- TANDEM AXEL - \$75.00
- MULTI AXEL - \$195.00

